


Tools Required




AS760 POST AND SLEEVE SYSTEMS

Assembling & Mounting


1. Slide the Panel with the As760 Extrusion over the posts.

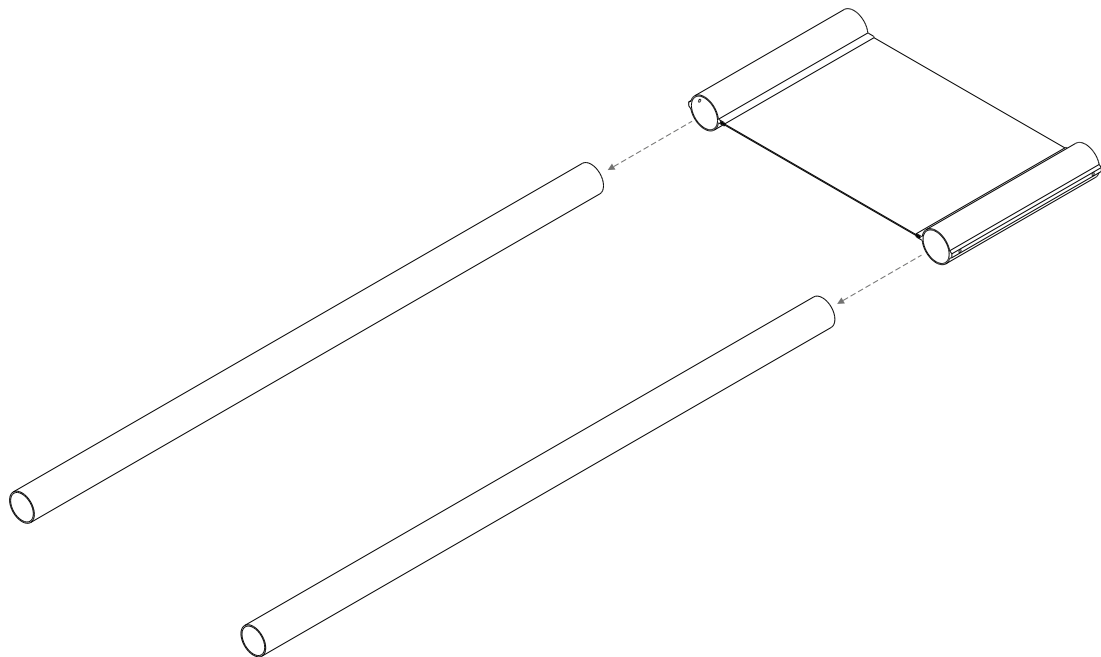


2. Place the Grub Screw into the As760 Extrusion and tighten them to the post.

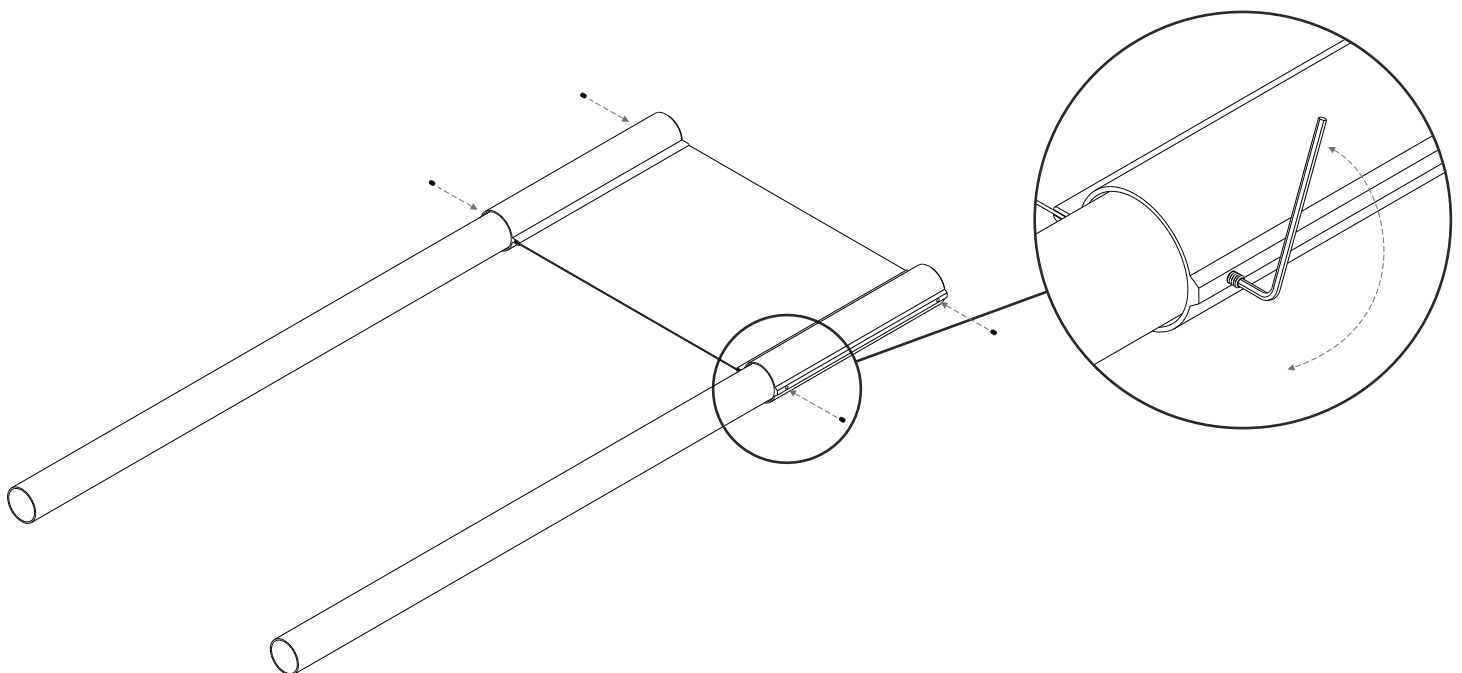

3. Slot the Post Caps into the end of the posts.

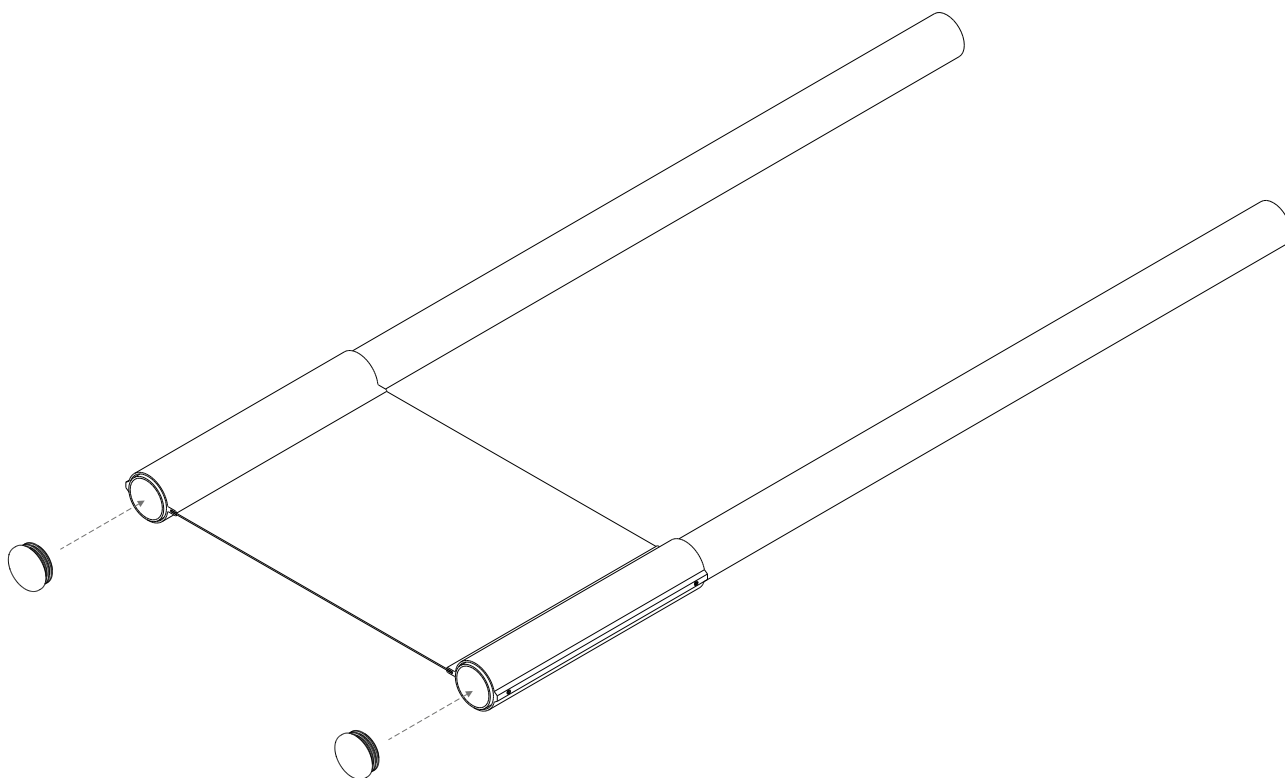

4. Dig holes and mount your posts in position required for your signage. (Please see website for further instructions)

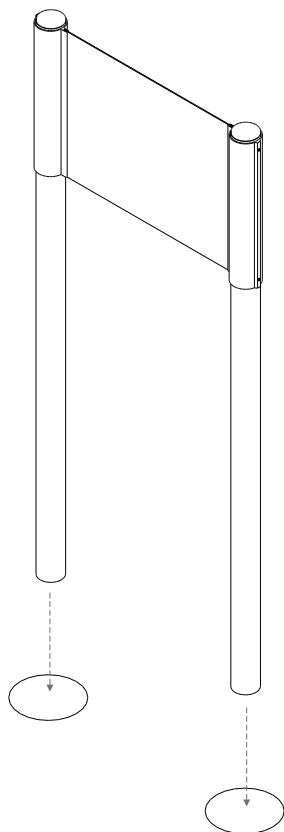

5. Your As760 system is now complete.

