



Tools Required

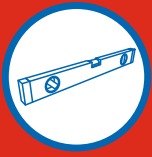

TRIPoint Fingerarm System

Triple Level (Example)
Assembling & Mounting

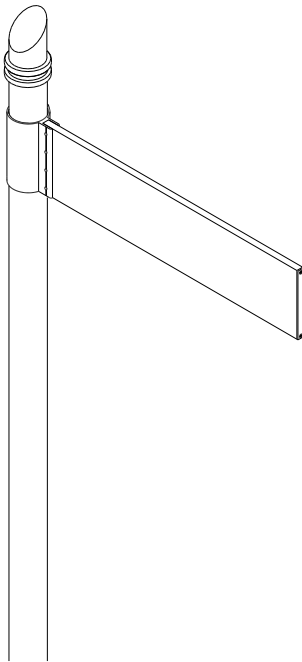


Single Level Options

Finger Arm Shape Options:


Chevron





Slanted

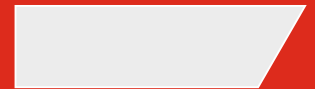


Rounded

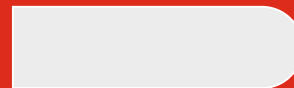

Flat End

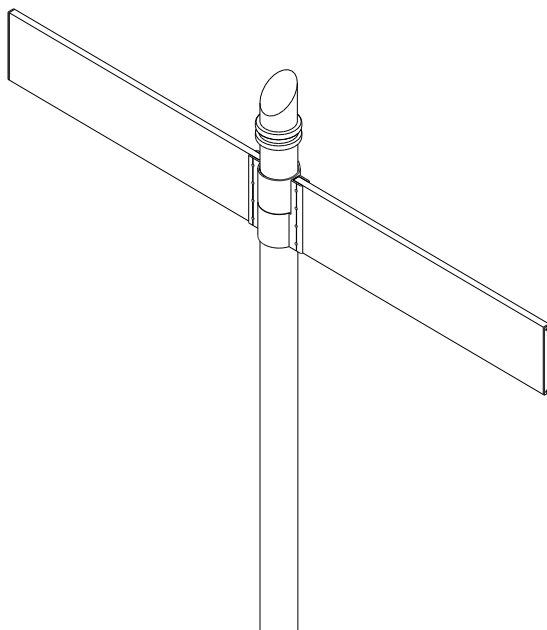


Dual Level Options

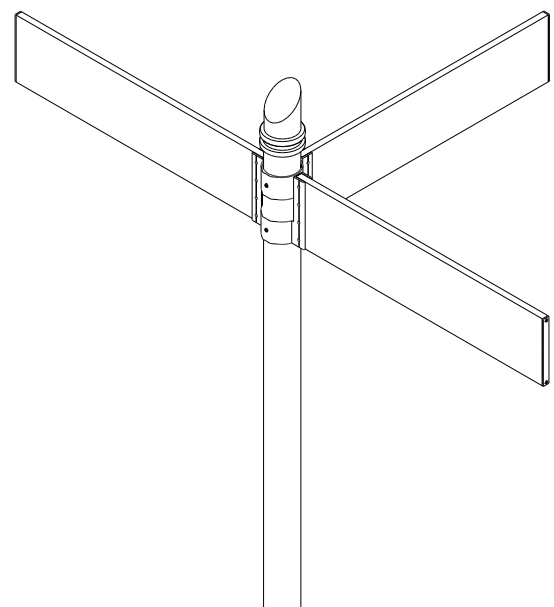


Triple Level Options




1. Dig the hole and mount your posts in position required for your signage. (Please see website for further instructions).

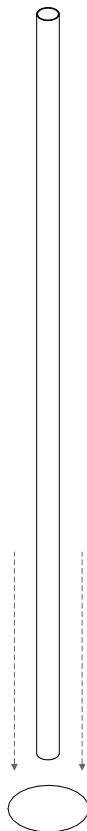


2. Slide the 1st Finger arm onto the post leaving enough space for the other two finger arms and a finial if you need to.
Point the finger arm in the direction you require it and then tighten the grubscrew to lock into place.

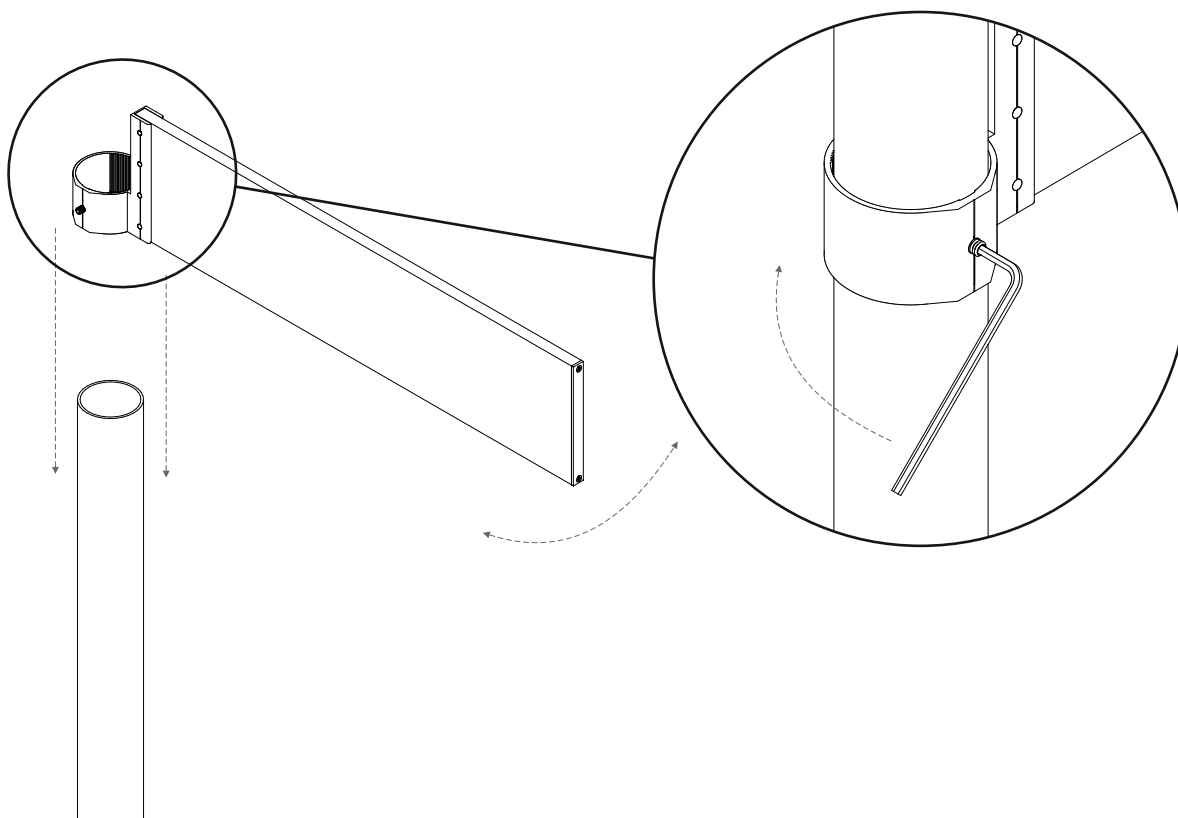


3. Slot the 2nd Finger arm (Centre Bracket) on top of the bottom finger arm and position as required, then tighten the grub screw to lock the finger arm into place.

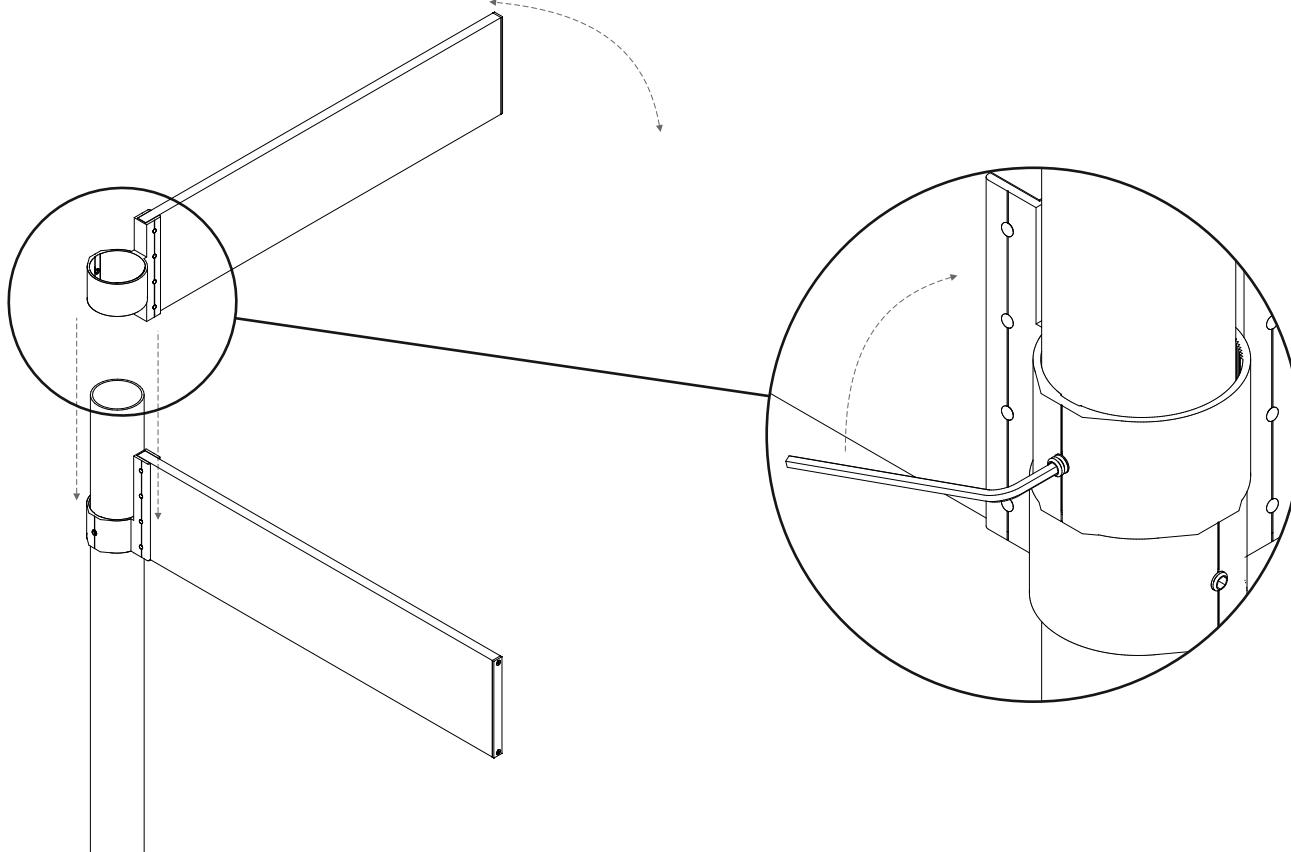

4. Slide the 3rd Finger arm onto the top of the 2nd finger arm bracket and position in place. Tighten the grub on the bracket to lock into position.

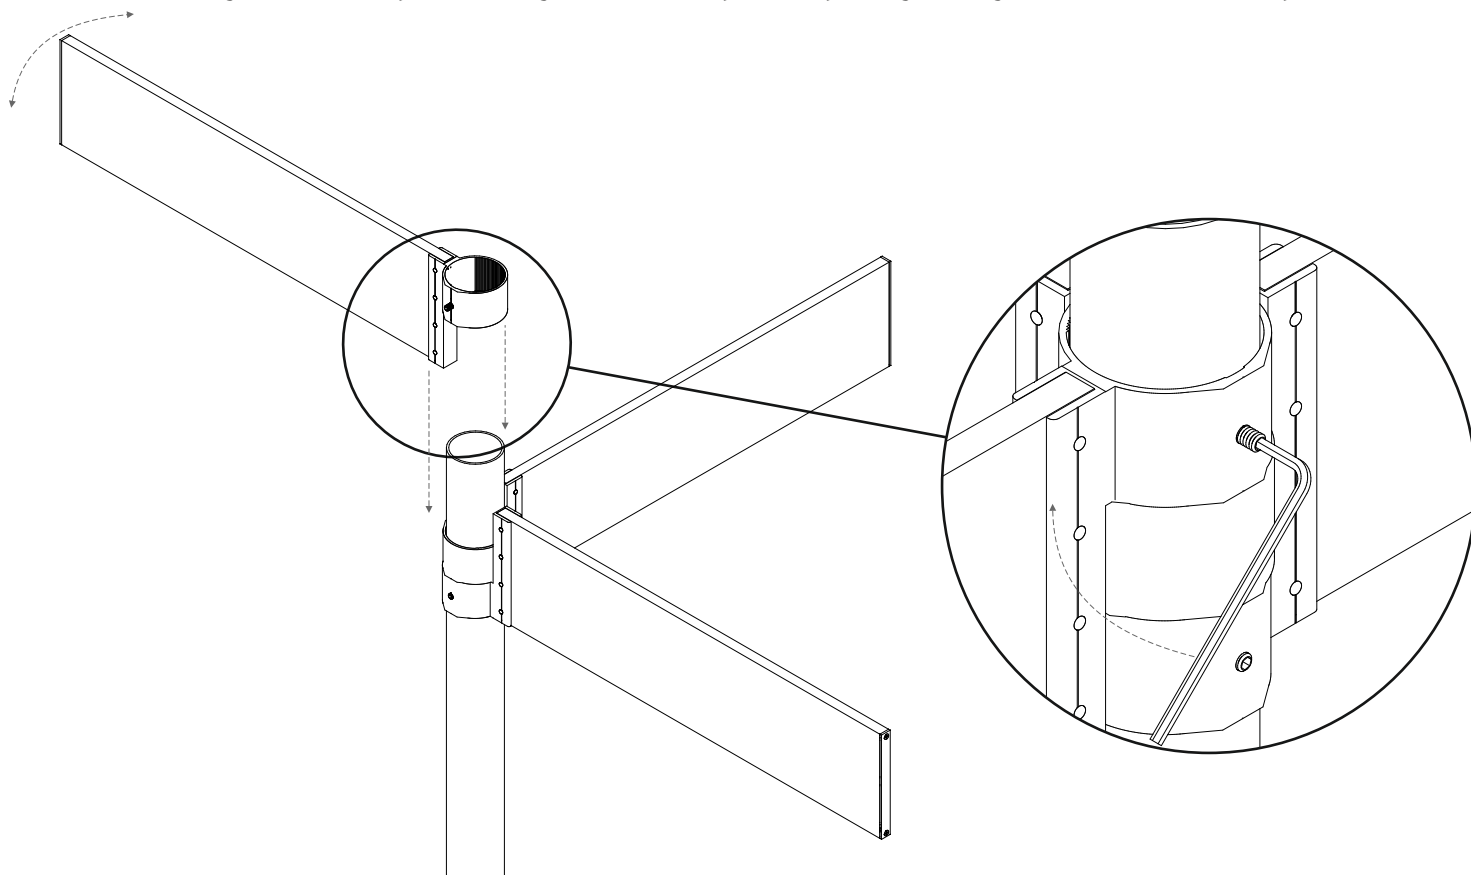

5. If you are fitting a finial place it on top of the post and tighten into place using the grub screw (Post Caps are also available).

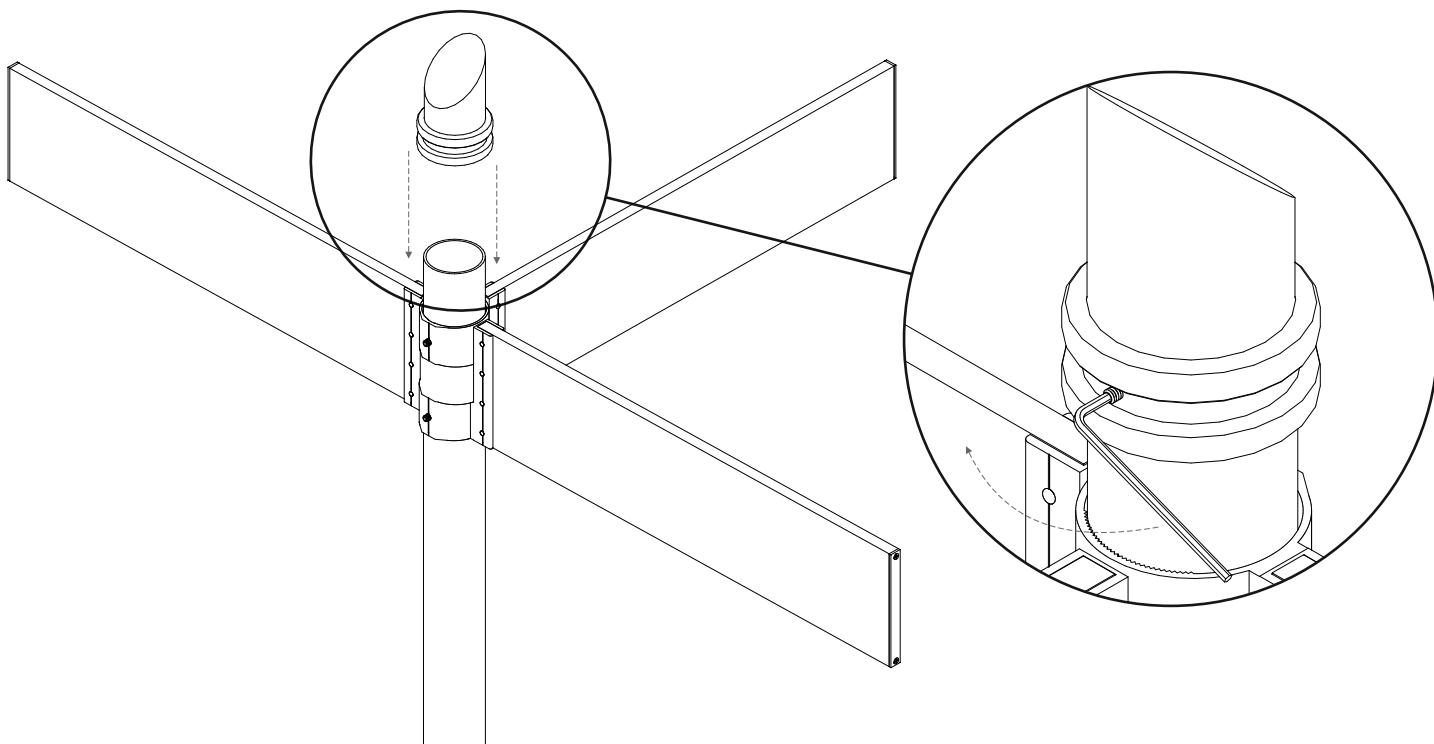

6. Your Triple Level Finger arm is now fitted.

