


Tools Required



OCTAPoint Fingerarm System


Assembling & Mounting

1. Dig the hole and mount your posts in position required for your signage. (Please see website for further instructions).




2. Slide the Finger arm into the relevant slot and then add the cover plate to cover the inner extrusion on the rest of that level.


LEVEL1

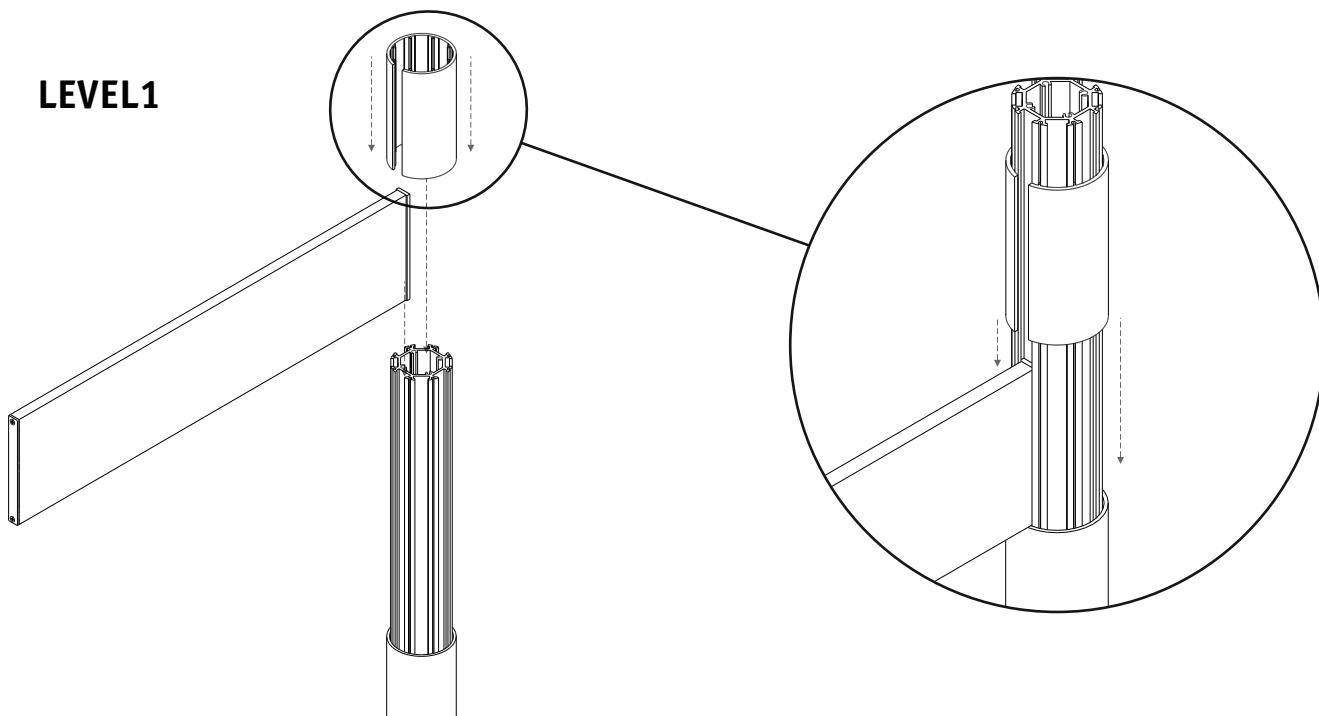

3. Repeat Dia No.2 for level 2 (Cover plates are cut to suit the finger arms being place in certain positions).

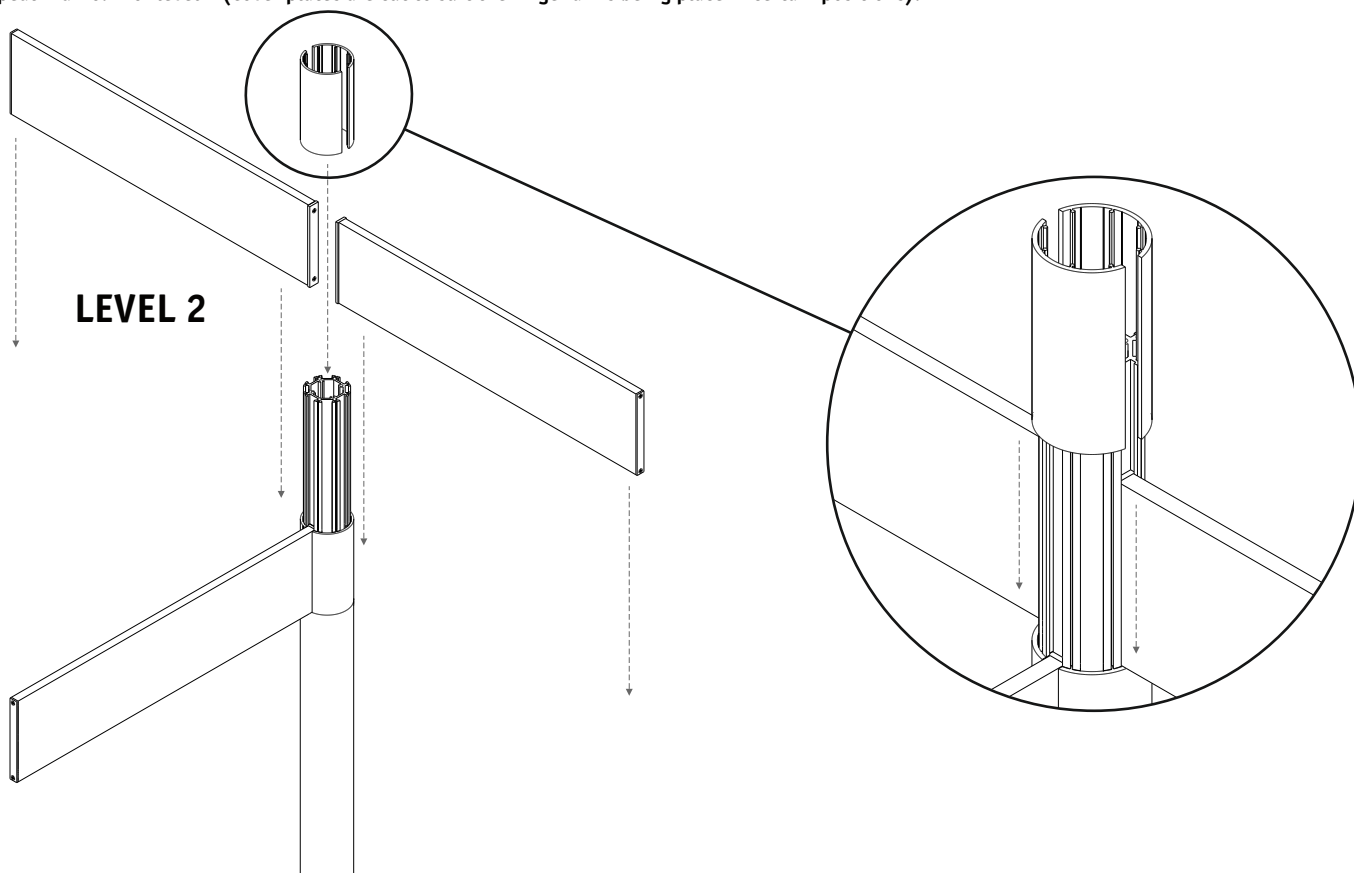

4. Slot the Beacon Cap onto the Extrusion and screw into place (Standard cap is optional with reduced inner extrusion)

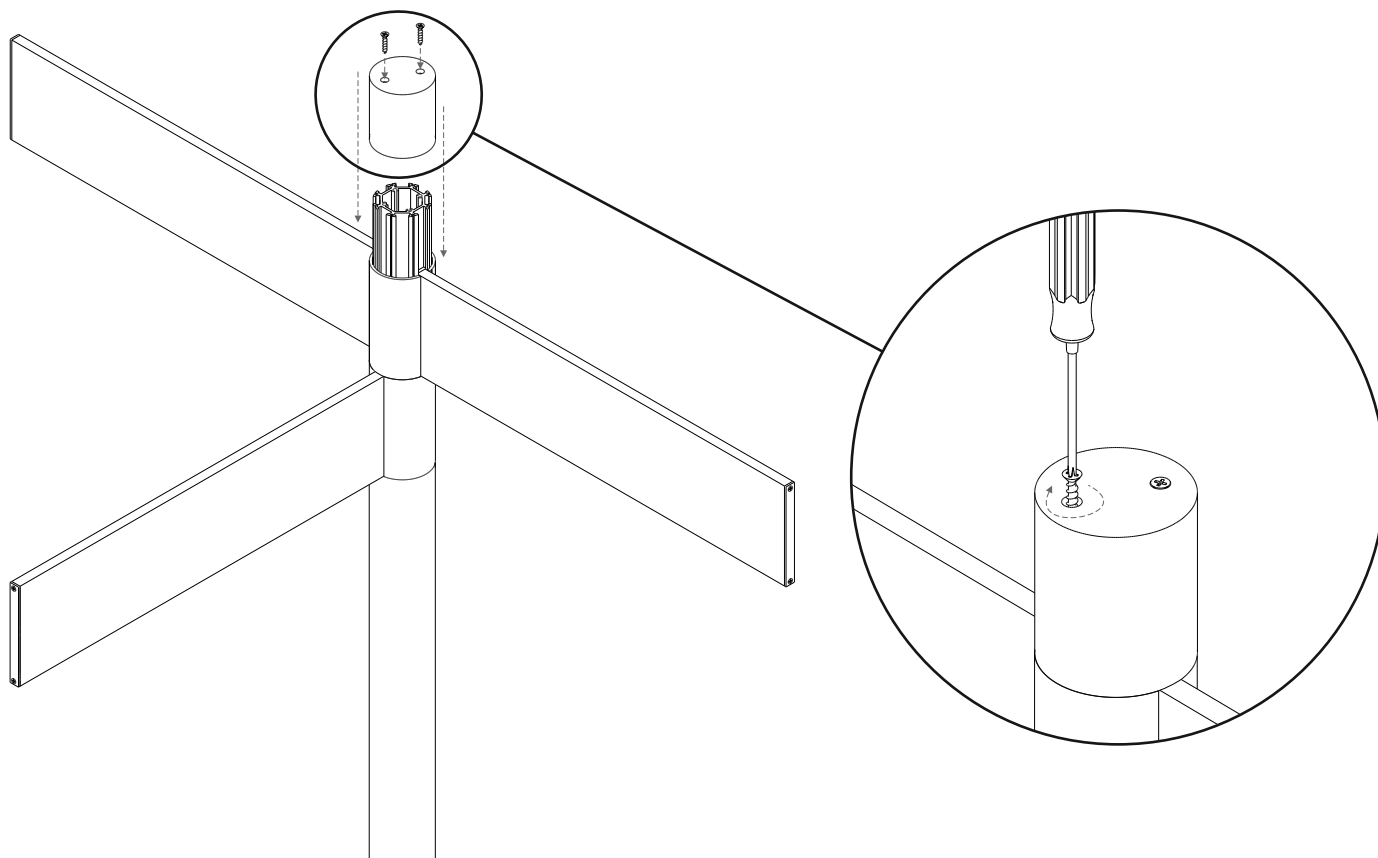

5. Your OCTAPoint Finger arm system is now fitted.

